


# Mounting Instructions for 6 DK A+B, 8 DK B, 10 DK B, Liferaft in square container installed on deck

V-MI- 0172



## Mounting instructions for container in cradle with Hammar hydrostatic release unit (HRU).

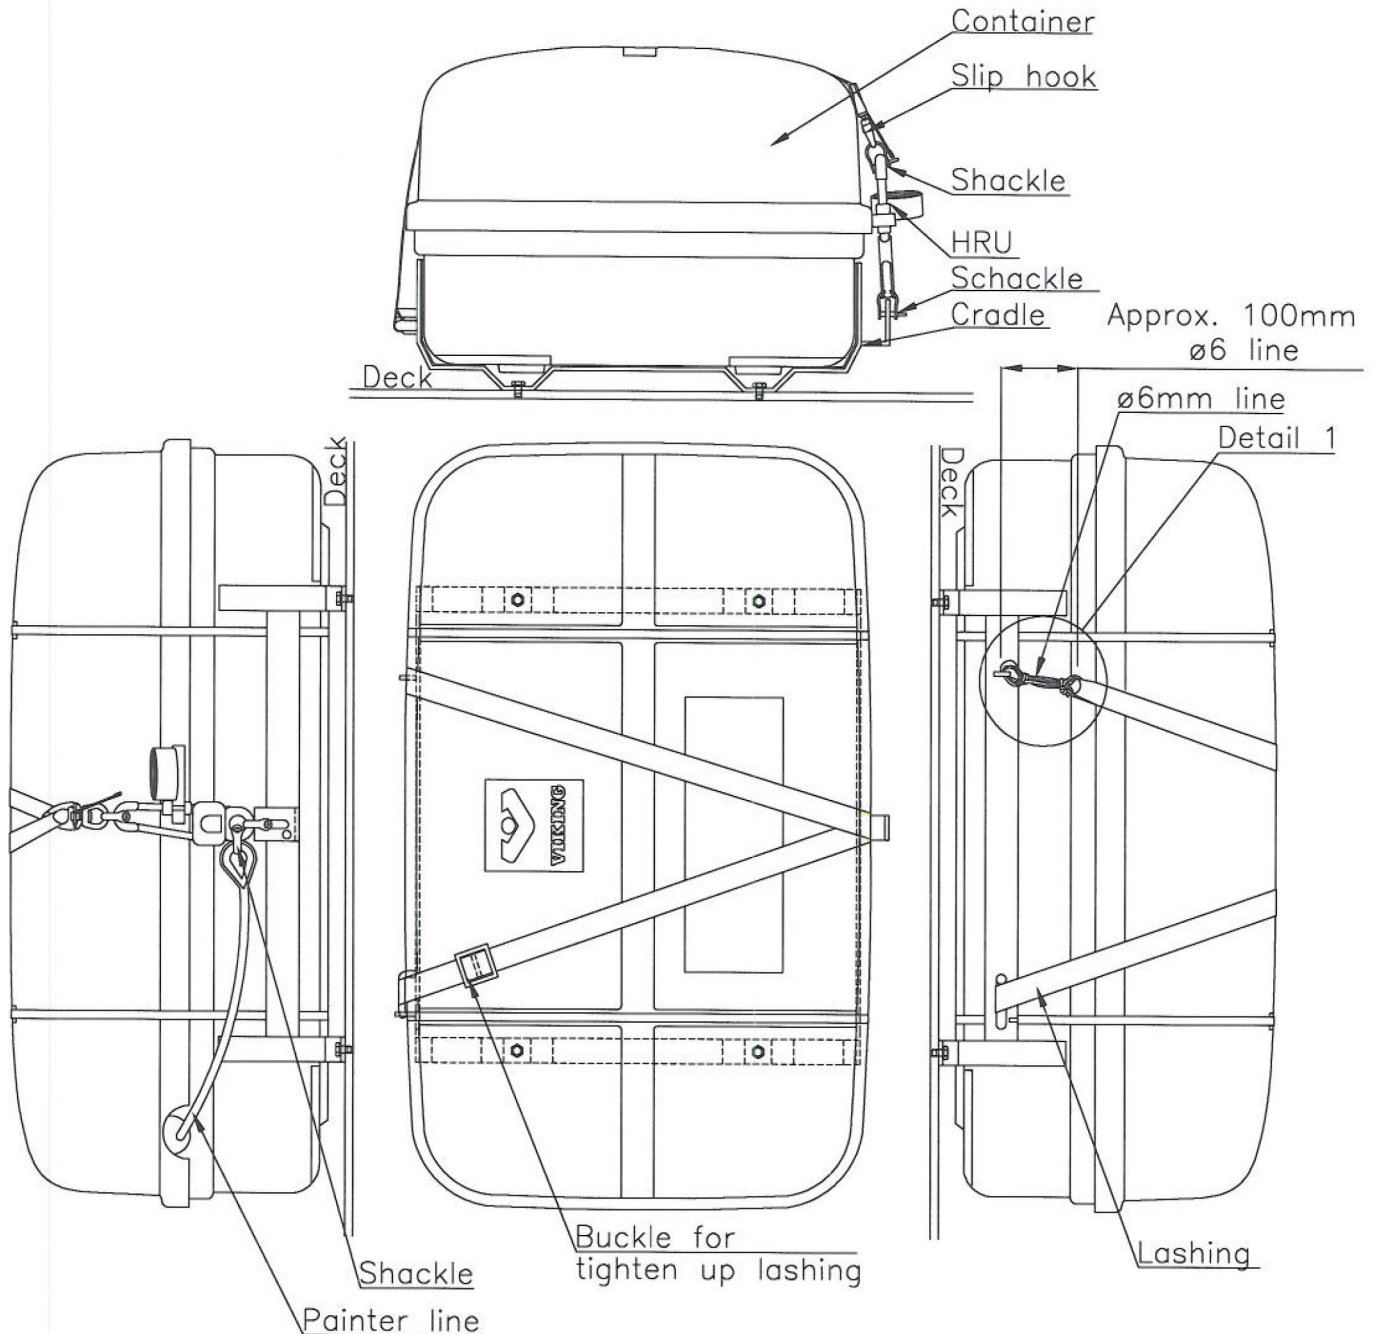


# Mounting Instructions for 6 DK A+B, 8 DK B, 10 DK B, Liferaft in square container installed on deck

V-MI- 0172



## Mounting instructions for cradle installed on deck

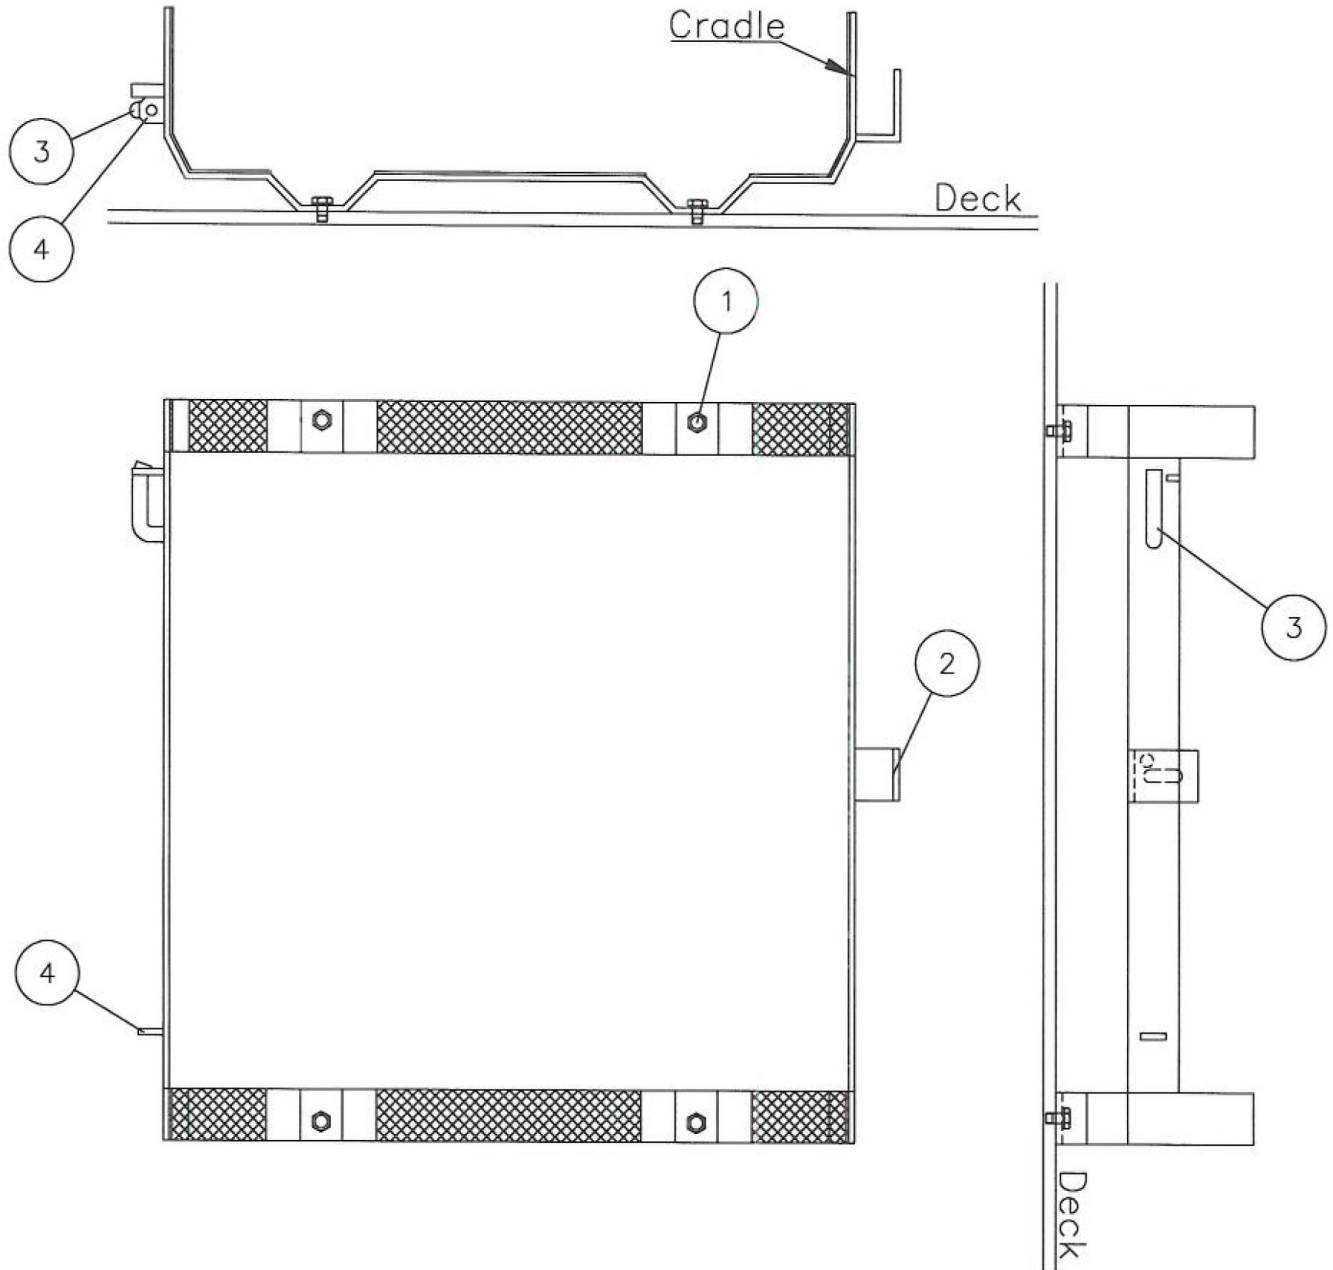

## General guidelines for installation of cradle on deck

- Position no.1: Delivered by customer  
M8 Bolts  
Ø8 Washers
- Position no.2: Fitting with  $\varnothing 10$  hole for Shackle only used for mounting of the painter line without HRU.  
Oval hole used for Shackle.
- Position no.3: Fitting for 30 mm lashing.
- Position no.4: Fitting for  $\varnothing 6$  mm line.

# Mounting Instructions for 6 DK A+B, 8 DK B, 10 DK B, Liferaft in square container installed on deck


V-MI- 0172



## Mounting instructions for container in cradle with Hammar hydrostatic release unit (HRU).

- 1.1 Bolt cradle on deck. see page 2
- 1.2 Mount container in cradle. see page 1
- 1.3  $\varnothing 6$  mm line: Fasten by means of bow knots and lead the line through both loops approx. 5-6 times and finish off with 2 times clove hitches. (see detail 1 page 4)


## Mounting instructions for cotainer in cradle without HRU.

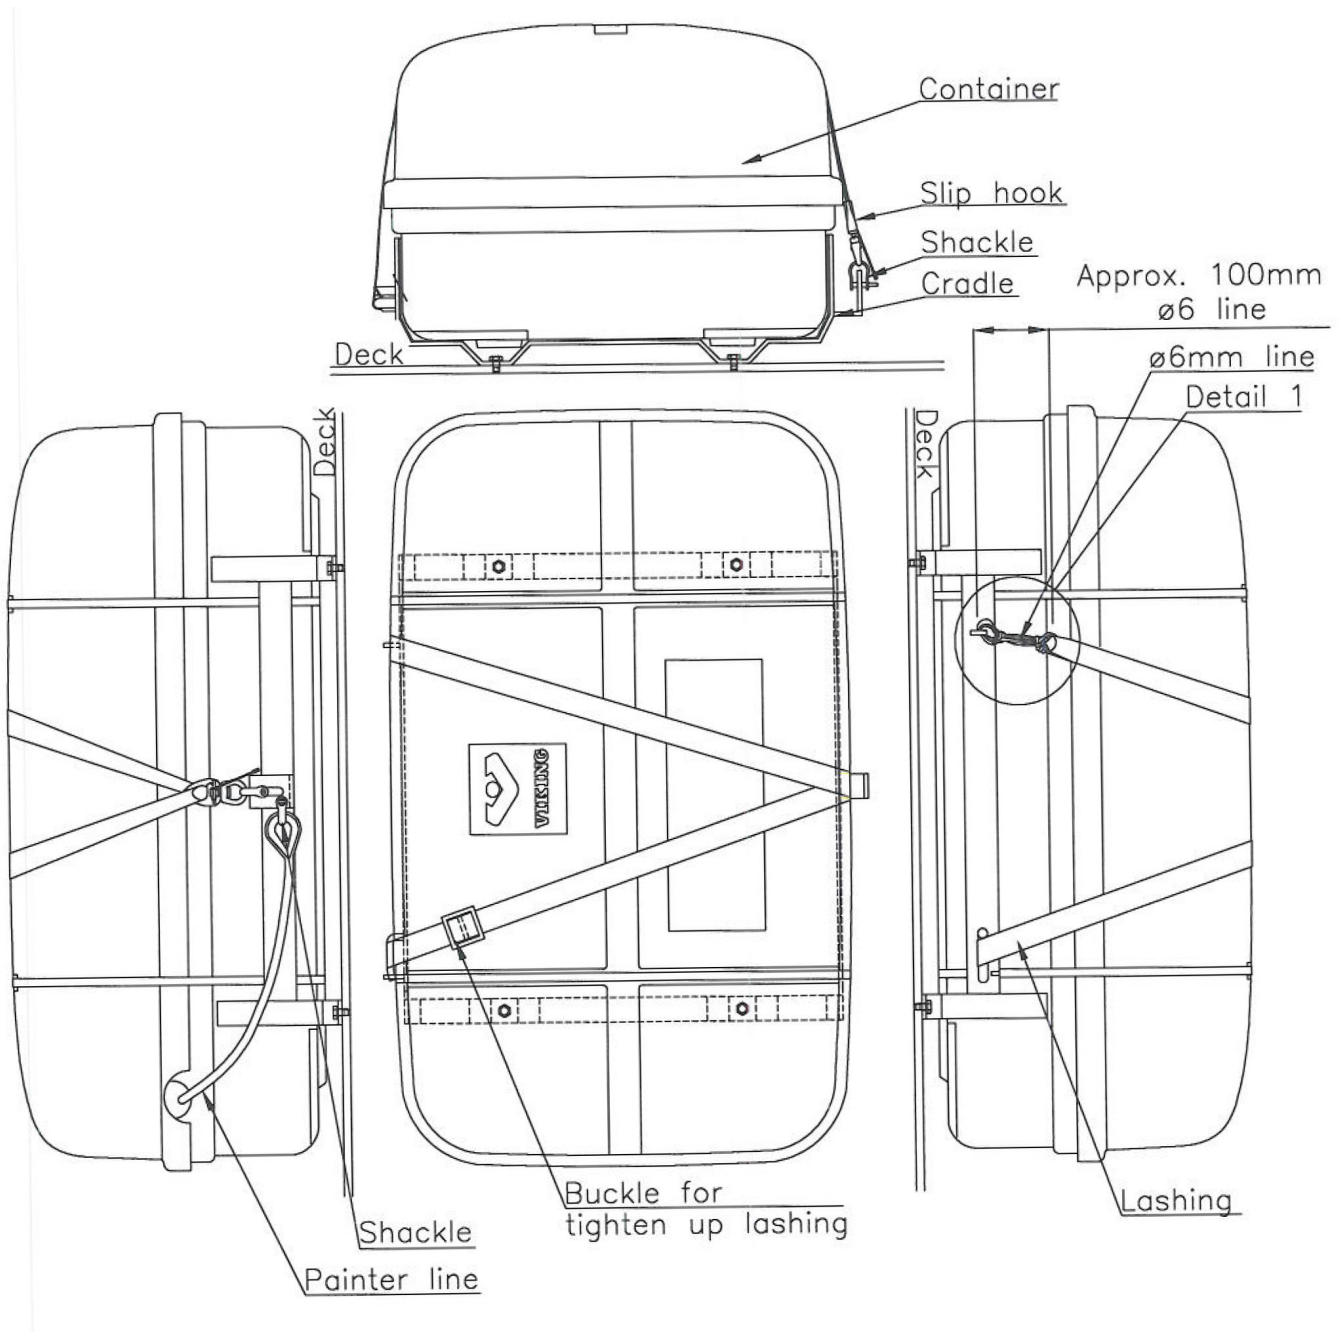


**Mounting instructions for container in cradle with Hammar hydrostatic release unit (HRU).**

- 1.1 Bolt cradle on deck. see page 2
- 1.2 Mount container in cradle. see page 3
- 1.3  $\varnothing 6$  mm line: Fasten by means of bow knots and lead the line through both loops approx. 5-6 times and finish off with 2 times clove hitches.  $\varnothing 6$  mm line: (see detail 1 page 4)

**Detail 1:**

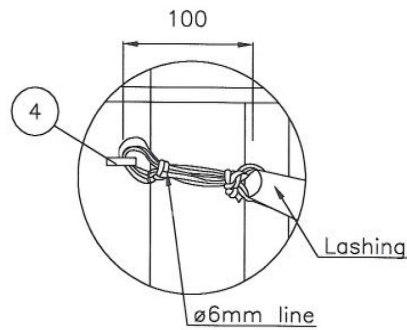

**Drain plugs:**

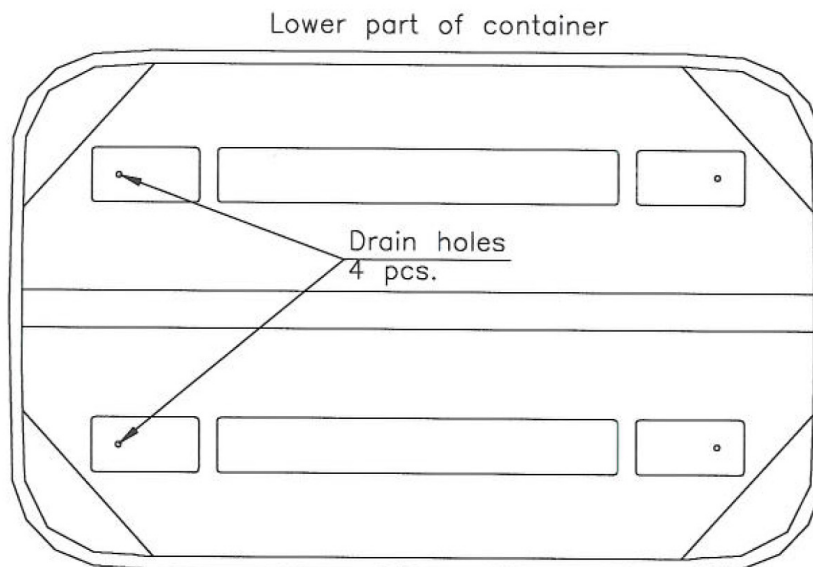

**Important! Remove the 4 plastic plugs from drain doles on container side pointing towards deck to create drains in container. The drain holes enable condensed water to run out of the container. Remove above mentioned plastic plugs by means of a knife.**



**Drain plugs**



## Maintenance of Hooks and Lashing

This instruction is to help to control and maintain lashings of liferafts, that are not part of the Marine Evacuation System.

### Lashing

The lashing of liferafts should be tight. Over the years they can start to rot, therefore you might have to change these.

Lashings have an approximate lifetime of 10 years. Lashings produced from 2018 forward are marked with date of manufacture, making it easier to plan replacement.



Lashing

### Hook

VIKING has two types of hooks, Pelican hooks and Slip hooks.

Both are made of corrosive resistant material, but on rare occasions corrosion may be found.

Both can be maintained by greasing with GREASE OMEGA 66, Material no.1012028 or Anti-corrosion wax based treatment with coating TT-290 material no.1065173. Long-time protection of steel parts. Apply the corrosion protection on the surface with a brush. Wipe off all excessive wax without removing the wax from moving parts.

Ensure to replace when corrosion is observed, or let it be fixed by the servicing station, when liferaft is in for service.

All spare parts can be purchased through the VIKING Servicing Network.



Pelican hook



Slip hook