

Mounting Instruction for Direct boarding - line type 2

V-MI- 0158



Mounting instructions for direct boarding liferafts (line type 2).


This instruction covers vessels where two liferafts or more are to be operated from the same evacuation door, the containers are fitted with an external connection line placed in a black pocket.

The line in the pocket on the raft closest to the evacuation door shall not be used and therefore it should be packed into the pocket.



Connection line pocket

Make sure the lashing lies flush with crossbar on cradle.

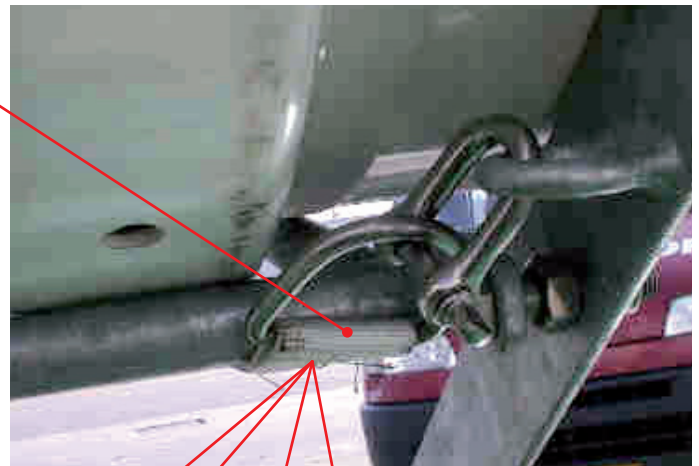


Evacuation door

Connection line in split tube between evacuation door and liferaft no. 1.

Liferaft no. 1

Liferaft no. 2

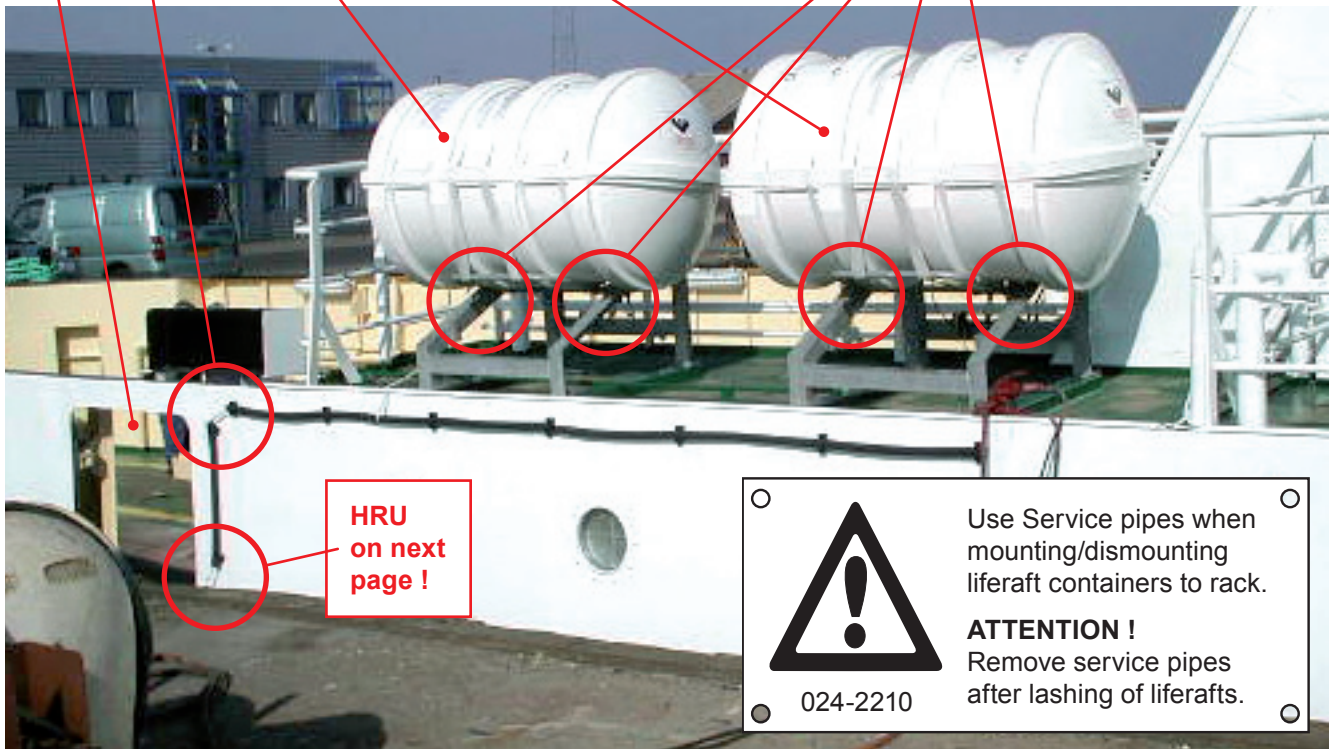

**HRU
on next
page !**




Use Service pipes when mounting/dismounting liferaft containers to rack.

ATTENTION !
Remove service pipes after lashing of liferafts.

024-2210

Mounting Instruction for Direct boarding - line type 2

V-MI- 0158

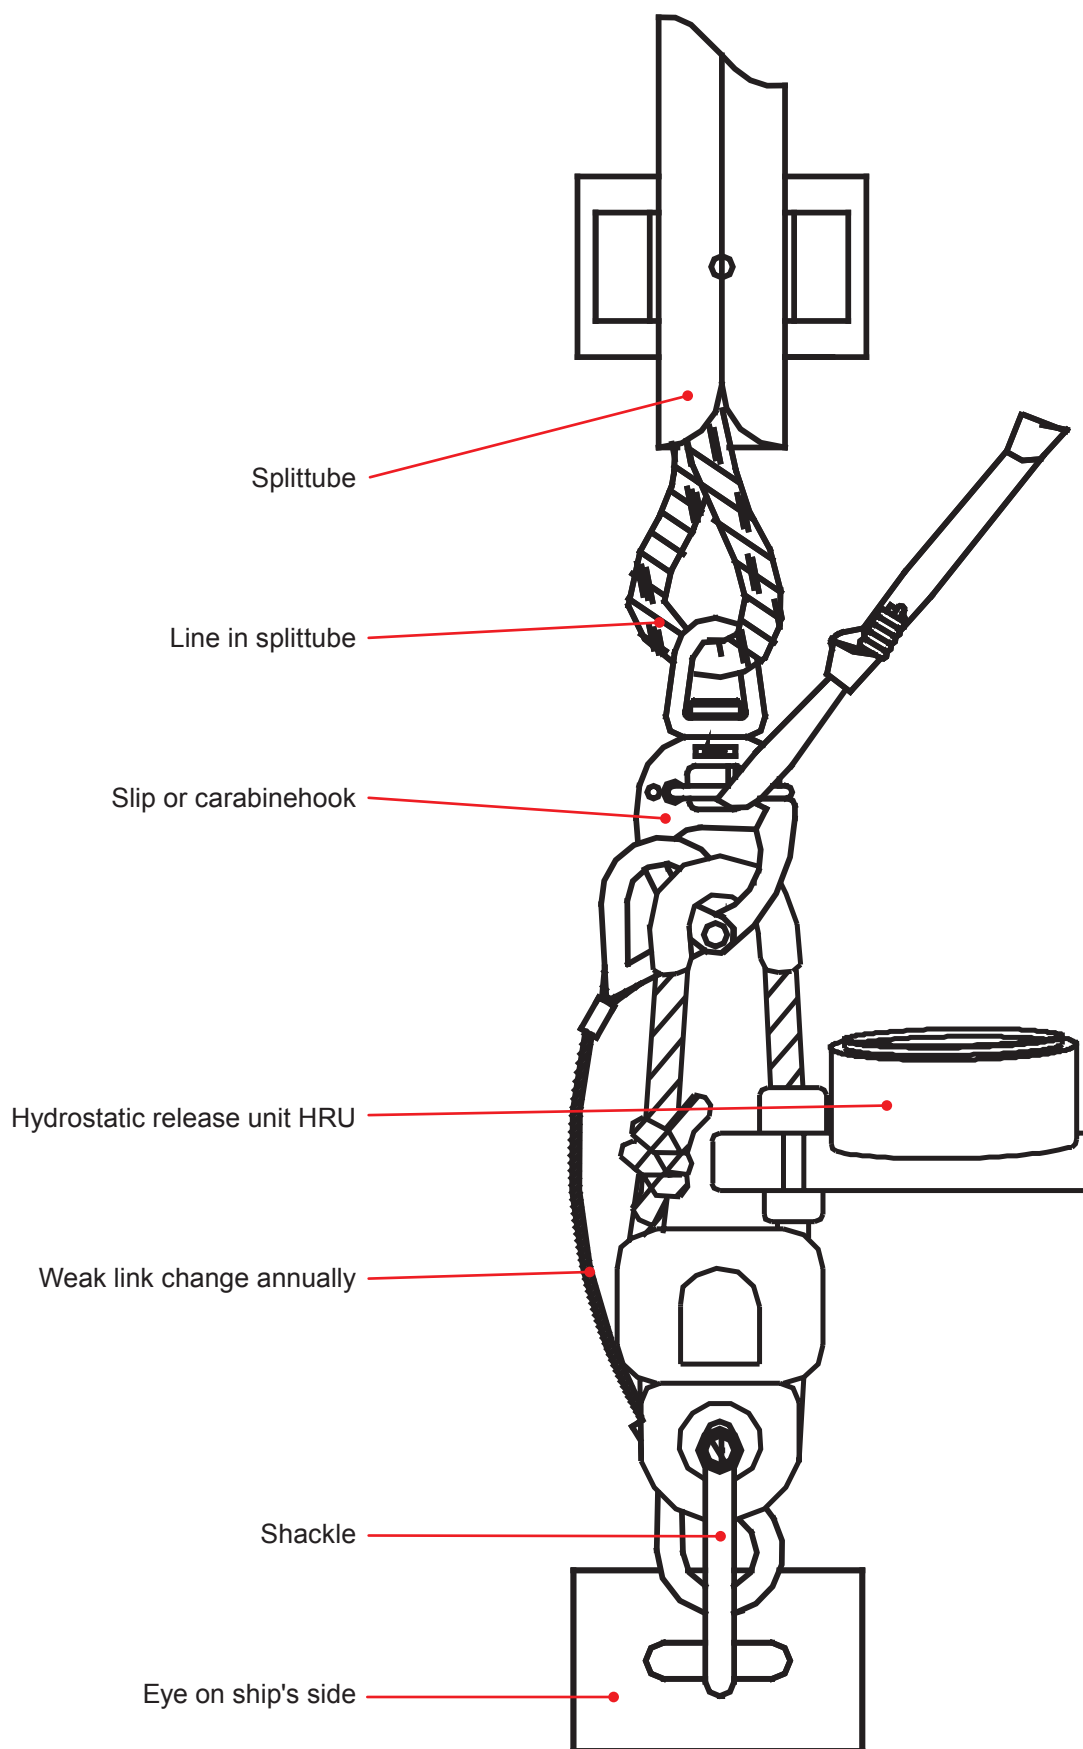

Mounting Instruction for Direct boarding - line type 2

V-MI- 0158




Mounting of lines on hydrostatic release unit on liferaft no. 1:

Splice three-stranded rope on painter.

Place the assembled lines on the carabine hook (connecting line) from liferaft no. 2.

- D-ring on lashing
- Slip hook
- Lacing
- Connecting line from liferaft no. 2
- Painterline
- Line from split tube

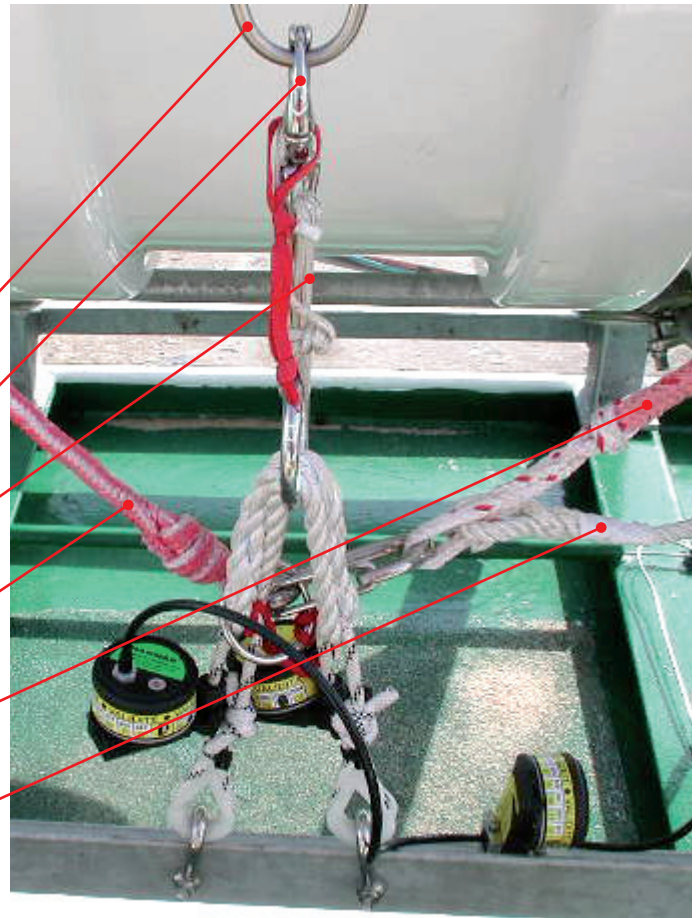

Place the carabine hook on the smaller metal ring on Hammar hydrostatic release unit.

- Painter line
- Line from ship's side
- Metal ring part of Hammar unit
- Carabine hook fitted to small metal ring of Hammar unit and painter line in split tube
- Small metal ring of Hammar unit
- Connecting line from liferaft no. 2



Mounting Instruction for Direct boarding - line type 2

V-MI- 0158



Mounting of lines on liferaft no. 2, 3, etc.:

Fit the painter line and the back end of the line in the black pocket to the small metal ring on the Hammar Unit by means of a carabine hook.

